

Operation

DPG1K

Operate the desk panel by tilting it.

1. Tilt and hold up DPG1K to drive desk up, press and hold down DPG1K to drive desk down.
2. Release DPG1K when you have reached your requested position.

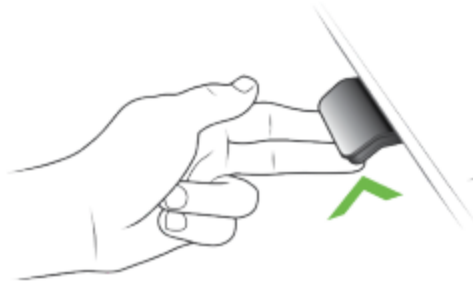


Figure 5: Tilt and hold the DPG1K to drive the desk up



Figure 6: Press and hold the DPG1K to drive the desk down

To reset your desk:

- 1) Press and hold the DPG1K to drive the desk down to its lowest position
- 2) Release the DPG1K when the desk stops at its lowest position
- 3) Press down the DPG1K again for approximately 3 seconds
- 4) The desk will lower slightly then raise back up slightly
- 5) Your desk has been successfully reset